

4. General Use

An Emergency Alert can ALWAYS be deployed.
Even if the pendant is off.

FUNCTION	BUTTON SEQUENCE
Send EMERGENCY alert	Press and hold for > 3 seconds until both LEDs blink green and orange.
Cancel EMERGENCY alert	2 clicks within 1 second, then hold until pendant beeps once and vibrates once.

5. Battery

WARNING
DO NOT REMOVE BATTERIES IN A POTENTIALLY EXPLOSIVE ATMOSPHERE.

USE ONLY THE FOLLOWING BATTERY TYPES:
Duracell® MN1500 or Energizer® E91 'AA' Alkaline batteries.

Normal typical battery life when used with recommended battery is 5-7 days, 10 hr/day.

1. Replace all batteries at the same time
2. Remove fully discharged batteries immediately.

6. Included Parts



Man Down Pendant



Gateway Interface Box



Windshield Gateway

RST410_REV02_09/12



www.beamcommunications.com
info@beamcommunications.com
TEL: +61 3 8588 4500
FAX: +61 3 9560 9055



QUICK START GUIDE

Man Down Pendant




Suitable for connection with Beam's
Tracking Products and Applications

Beam Communications Pty Ltd

1. LED Indications During button press

Send EMERGENCY alert

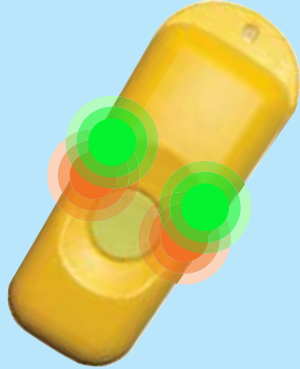

Press and hold (for > 3 seconds) until both LEDs blink green and orange.

*LEDs will continue to blink until EMERGENCY alert is acknowledged or cancelled.

1A. LED Indications

LEFT LED

- Solid Green - Motion sensing OFF
- Solid Orange - Motion sensing ON



RIGHT LED

- Solid Green - Pendant in operating range.
- Solid Orange - Pendant out of operating range.
- Blinking Green - Pendant in operating range, battery low.
- Blinking Orange - Pendant out of operating range, battery low.

2. Button Functions

OFF

ON

ON WITH MOTION SENSING

Double click within 1s

Double click within 1s

Double click within 1s

Triple click within 1s

Triple click within 1s

Triple click within 1s

3. Sound/Vibrate Indications

Pendant powering on/off



Cancel EMERGENCY alert



Successful acknowledgements



2 sound sequences will sound.

Unsuccessful acknowledgement



2 sound sequences will sound.

MOTION SENSE EMERGENCY alert caused by lack of motion



1-6 beeps every 5 seconds if there is no motion after 30 seconds.

Out of range alert




1 beep will sound every 10 seconds.

Battery Low



1 beep will sound every 60 seconds.

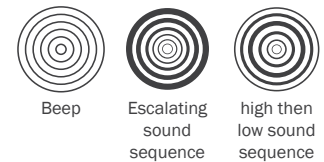

Beep

Escalating sound sequence

high then low sound sequence



4 Vibrations



1 Vibration